CLIP-ON
MP3 PLAYER

GB IE CY **User manual and service information**

SilverCrest

User's Manual

SilverCrest MP3 Sport-Clip 1000

Thank you for choosing this high-end SilverCrest product.

This device allows you to play the popular MP3 and WMA audio formats. The built-in flash memory has 2GB of capacity and lets you store hundreds of songs, depending on their bit rate. The device is DRM-compatible and therefore also supports MP3 title downloaded from the Internet. Furthermore, your Sport-Clip integrates a digital voice recorder (dictaphone),

Please read this User manual carefully and follow the safety instructions.

Table of Contents

Important Notice 4
Power Supply 4
Rechargeable Battery 5
Maintenance and Care 5
Cables 6
Kids 6
Noise Emission Cautions 7
Conformity 8
Disposal of Old Devices 8
Introduction 9
Package contents 9
Summary 10
Music Playback Display 11
Getting started 12
Charging the Battery 12
Recharging from a Power Outlet 12
Recharging from a Computer 12
Powering the Device On/Off 13
Powering On 13
Powering Off 13
Choosing the Operating Mode 13
Setting the Language 14
Adjusting the Volume 14
Connecting the Earphones 15
The Clip 15

Operating Modes 16
Music 16
Music Menu 17
Repeat mode 17
Equalizer 18
3D 19
Play rate 19
Intro 20
Display 21
A-B 21
File Browse 22
Voice 23
Recording voice 23
Playing Back a Recording 24
Record Menu 24
Setup 25
USB Mode 25
Power 26
Language 26
Display 27
Sys tools 28
Transferring Music 30
Connecting to a Computer 30
As Pen Drive 30
As DRM Player 31
Appendix 32
Technical Specifications 32
Details of Guarantee 33

Important Notice

Before you use this device for the first time, please read the following notes in this manual and heed all warnings, even if you are familiar with handling electronic devices. Keep this manual in a safe place for future reference. If you sell or pass this device on to another person, it is imperative that you also hand over this manual.

Position the device on a stable, even surface and do not place any objects on the device.

The device is not for use in environments with a high temperature or humidity (e.g. bathrooms), and must be kept free of dust. The allowed operating temperature and humidity are: 5 °C to 35 °C, max. 75 % RH

Always make sure that:

- no direct heat sources (e.g. heating) can affect the device;
- no direct sunlight or artificial light reaches the device;
- contact with spray and dripping water and abrasive liquids is avoided and the device is never operated near water, and it must especially never be immersed;
- no fire sources (e.g. burning candles) are placed on or near the device;
- no foreign bodies are introduced into the device;
- the device is not subject to excessive shocks and vibrations.

Power Supply

Use only the supplied power adapter model Targa KSUFB0500100W1UK or the supplied USB cable to avoid overheating, deformation of housing, fire, electric shock, explosions and other dangers. Never connect the power adapter or the USB cable to other devices.

In order to completely disconnect the power adapter from the mains, the power adapter must be pulled out from the wall outlet. For this reason, the power adapter should be positioned in a way that assures unobstructed access to the power outlet so that the power adapter can be immediately pulled out in an emergency situation. To avoid the danger of fire if the power adapter is not going to be used for a long while (e.g. during holidays), it should always be disconnected from the power socket. Before stormy weather when there is the danger of lightning, disconnect the power adapter from the power supply.

Rechargeable Battery

This device uses a high-end Lithium-Polymer battery. This battery should only be removed or replaced by an authorized service centre. Under very rare conditions, sparks may appear at the contacts causing any explosive and/or inflammable gases to ignite. Explosion-sensitive areas will normally (but not always) be labelled. These include fuel storage areas such as below deck on a boat, fuel line or tank areas, environments where the air contains inflammable substances (e.g. cereals, metal dust or powder, etc.) and any areas where you should normally switch off your car engine.

Maintenance and Care

Servicing is required when this device has been damaged in any way, for example, when the power plug, power cord or housing is damaged, when liquid or objects have entered the device, when the product has been exposed to rain or moisture, when the product does not work normally or if the product has been dropped. If you notice any smoke, unusual noise or strange smells, switch off the device immediately and pull the plug from the wall outlet. In this case the device should not be used further and should be inspected by authorized service personnel. Please contact qualified personnel when servicing is needed. Never open the housing of the device, the

power adapter or the accessories. If the housing is opened, your life is in danger due to electric shock. Only use a clean, dry cloth for cleaning. Never use any abrasive liquids. Do not attempt to open the housing of the device otherwise you will void the warranty.

Cables

Always hold cables by the plug and never pull on the cable itself. Never hold the power cord with wet hands as this may cause a short circuit or electric shock. Never place the device, heavy objects or furniture on the cable and take care that the cord does not become trapped, especially at the plug and sockets. Never make knots in the cable and do not tie it together with other cords. All cables should be positioned so that nobody can trip over them or be obstructed by them.

Kids

Electrical appliances do not belong in the hands of children. Do not allow children to play with electrical devices when not under supervision. Children may not be able to comprehend the presence of potential risks. Small parts can represent choking hazards. Keep the packaging away from children to avoid the danger of suffocation.

Noise Emission Cautions

Audio listening with your MP3 player at high volume over a long time can harm the user's auditory system. *The supplied earphones will guarantee a noise level limitation only when used together with the corresponding device.*

- According to international safety regulations the maximum permitted noise level is 100 dB. The supplied earphones with model numbers SPHS1000 and IEHS1000 comply with these requirements. When using different headphones harmful noise levels may damage the user's hearing.
- Using the earphones at high sound volume can damage your hearing and cause nuisance to your surroundings.
- Under dangerous circumstances (for example when driving a vehicle or when working with machines) the sound may distract your attention or prevent you from being aware of what is happening around you.
- The supplied earphones (SPHS1000 and IEHS1000) must be used with this MP3 player exclusively. The supplied earphones will guarantee a noise level limitation only when used together with the corresponding MP3 player.

Conformity

This device has been tested and approved for compliance with the basic and other relevant requirements of the EMC Directive 2004/108/EC, as well as the Low-voltage Directive 2006/95/EC.

Disposal of Old Devices

If the product is labelled with a struck-out waste bin, it is subject to the European Guideline 2002/96/EC. All electric and electronic devices must be disposed of separately from household waste at established bodies. Avoid damaging the environment and danger to your personal health by disposing of the device properly. For further information about proper disposal, contact your local government, disposal bodies or the shop where you bought the device.

Introduction

Package contents

A Sports headphones SPHS1000

B Power adapter

C In-Earphones IEHS1000

D Driver CD (for Microsoft® Windows 98)

E MP3 player

F USB adapter cable

Summary

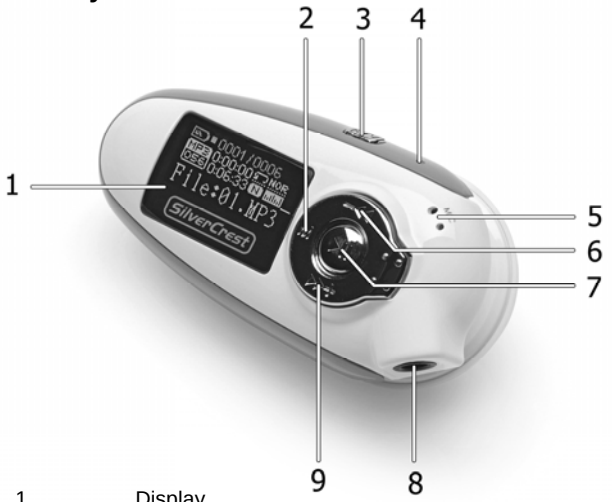

1		Display
2	M	Mode button
3	R/V	R/V button (Record / Volume)
4		Reset
5		Microphone
6	◄◄	Back
7	►II	Play/Pause (for playback and pause of playback)
8		Headphones jack and charger connector (for recharging the built-in battery use only the supplied USB adapter cable [F]).
9	►►+	Next

Music Playback Display

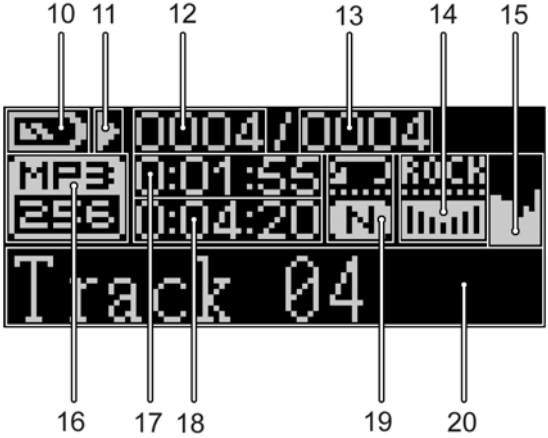

10 Battery indicator

11 Mode

12 Current title

13 Total number of titles

14 Equalizer (see page 18) and 3D indicator

15 Level indicator

16 File format and bit rate

17 Current playtime

18 Total playtime of title

19 Repeat mode (see page 17), Intro mode (see page 20), A-B repeat mode (see page 21)

20 ID-3 tag or file name of current title

Getting started

Charging the Battery

When the built-in battery is low on power, recharge the battery either using a power outlet or a computer, by means of the USB cable. When recharging it from a USB port, the device will establish a connection with the computer at the same time (see page 30). In this case, the buttons of the device will be disabled.

The built-in battery won't reach its maximum performance until several complete charging cycles have been performed. This means that the battery should be charged completely and then fully discharged by using the device.

For recharging the built-in battery use only the supplied USB adapter cable [F].

Recharging from a Power Outlet

- Insert the round-shaped jack connector of the USB adapter cable [F] into the headphones connector of your MP3 player.
- Plug the flat USB connector of the USB cable into the receptacle of the power adapter [B].
- Plug the power adapter into a wall outlet.

Recharging from a Computer

- Insert the round-shaped jack connector of the USB adapter cable [F] into the headphones connector of your MP3 player.
- Next, plug the flat USB connector of the USB cable into a free USB port on your computer.

Depending on the computer configuration the battery can be recharged only while the computer is powered on.

Powering the Device On/Off

Powering On

To power the device on, press and hold the ⏯ button [7] for approx. 6 seconds. The MP3 player welcomes you displaying "Hello!" and starts the MP3 Playback mode.

Powering Off

To power the device off, press and hold the ⏯ button [7] for approx. 3 seconds. The MP3 player displays "Good Bye!" and powers off.

Choosing the Operating Mode

When powering the device on for the first time, it starts the MP3 Playback mode. To toggle between the available operating modes **Music**, **Voice** and **Setup**, proceed as follows:

- Press the Mode button **M** [2].
- Press ⏭ [9] or ⏮ [6] to toggle to the desired operating mode.
- Press ⏯ [7] to confirm the selected mode.

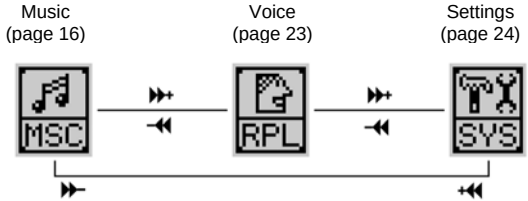

Setting the Language

Upon factory delivery the device is set to the English user interface. The product offers multiple display languages. Proceed as follows to select a language:

- Power the device on by pressing and holding the ⏯ [7] button for approx. 6 seconds.
- Press the Mode button M [2].
- Press ⏭ [9] or ⏮ [6] until the **Setup** menu displays.
- Press ⏯ [7].
- Press ⏭ [9] or ⏮ [6] until the **Language** menu displays.
- Press ⏯ [7].
- Press ⏭ [9] or ⏮ (6) to select the desired function.
- Press ⏯ [7].
- Press the Mode button M [2] to exit the menu.

Adjusting the Volume

- Press R/V [3]. The current volume level will be displayed.
- Press the button ⏮ [6] to reduce the sound volume or press the button ⏭ [9] to increase it.

Keep the corresponding button pressed to accelerate the volume adjustment.

Connecting the Earphones

Insert the jack-type connector of the sports headphones [A] or of the In-Earphones [C] into the headphones connector [8] of your MP3 player.

The Clip

The MP3 Sport-Clip features a spring-type clip. This allows you to fix the device on to a belt or clothes for mobile use.

To open the clip, use your thumb and index finger to press the indentation on the back of the device and the mark located on the right side of the multifunction button (see figure).

Operating Modes

Music

This operating mode allows you to play music, set different equalizer and playback options, set up the icons display, use the File Browser to navigate the flash memory and erase individual titles.

You can control the playback as follows:

Button	Function
⏯ [7]	Play / Pause:
⏭ [9]	Press briefly: Next title Keep pressed: Fast forward of current title
⏮ [6]	Press briefly: Previous title Keep pressed: Fast backward of current title
R/V [3]	Adjust volume, (see page 14)
M [2]	Open the Music menu

Music Menu

The Music menu is available only during the playback of a title. Press the Mode button **M** [2] and then press ⏭ [9] or ⏮ [6] to select the desired option. Press ⏯ [7] to confirm the selected option.

After you are done adjusting an option, press the Mode button **M** [2] multiple times to return to playback mode.

Repeat mode

In Repeat mode you can press ⏭ [9] or ⏮ [6] to select from seven different repeat modes and random playback. Press ⏯ [7] to confirm the desired option.

Icon		Function
	No Repeat	Playback stops after the last title has been played
	ONE	The current title will be played back repeatedly
	All	All titles will be played repeatedly.
	Random All	Random playback of all available titles
	Dir Repeat	Only the contents of the current folder will be played back
	Dir All Repeat	The current folder will be played back repeatedly
	Dir Random All	Random playback of contents of current folder

Equalizer

The equalizer offers five sound presets, no sound effects and a user-defined setting.

Icon		Function
	Normal	No sound effect
	Pop	Amplification of the lower mid-tones
	Rock	Bass and treble amplification
	Classic	Bass and mid-tones amplification
	Jazz	Amplification of mid-tones
	Bass	Strong bass amplification
	Custom EQ	User-defined sound effect (for description, see below)

Assigning a custom sound effect

Select **Custom EQ** and press ⏯ [7] to confirm. A graphic equalizer will appear:

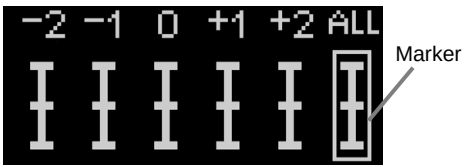

Press R/V [3] to move the marker (see figure) to a frequency range (**-2** corresponds to bass, **+2** corresponds to treble). Then press ⏭ [9] to set an amplification or ⏮ [6] to set an attenuation of the sound level for the selected frequencies. Setting the marker to **All** lets you move all sliders simultaneously.

3D

This option allows you to listen to 3D sound. Press ⏭ [9] or ⏮ [6] to toggle between **On** and **Off**. Press ⏯ (7) to confirm your selection.

If 3D is enabled, the **3D** indicator will appear on the music playback display (page 11, item 14).

Play rate

The play rate lets you set the playback speed to 0.67x, 0.80x, 1.00x, 1.14x and 1.33x. Press ⏭ [9] or ⏮ [6] to select the desired play rate and press ⏯ [7] to confirm. The play rate will not appear on the display.

Intro

This option allows you to play the first seconds (configurable) of all available titles. After selecting **Intro** the following will appear on the display:

- Press ⏭ [9] or ⏮ [6] to set the intro playtime between 0 seconds and 15 seconds (0 seconds disables the function).
- Press ⏯ [7] to confirm your setting.
- The display toggles to music playback and the icon appears on the display (page 11, item 19).
- Press ⏯ [7] to start Intro playback.
- The message **Intro** will appear for a few seconds and each title will be played for the set time.
- Press ⏯ [7] to stop Intro playback. The current title will be played entirely and the Intro function will be disabled.

Make sure you set the Repeat mode (page 17) to **No Repeat***, otherwise the Intro playback will work according to the set Repeat mode.*

Display

By default, title playback is accompanied by a sound level display (page 11, item 15). The option **Display** lets you turn off the sound level display or toggle to Stereo display.

Icon		Function
	Wave motion	Sound level indicator bars
	Stereo	Sound level display of stereo channels
	Off	No sound level display

A-B

This option lets you set a specific title section to be repeated. Proceed as follows:

- Press ⏯ [7] to confirm the option **A-B**.
- The playback view will appear: The icon will blink instead of the repeat indicator (page 11, item19).
- As soon as playback has reached the starting position of the section you want to repeat, press **R/V** [3].
- The icon changes:
- As soon as playback has reached the end position of the section you want to repeat, press **R/V** [3] again.
- The set section will be played back repeatedly. Press **R/V** [3] again to stop playback. Playback resumes normally.

File Browse

This option lets you display the folders and files stored on the flash memory. Press ⏭ [9] or ⏮ [6] to select a file. Press ⏯ [7] to play a selected title. You can also delete the currently selected title by pressing the R/V [3] button. The message **No** will appear on the display. Then press ⏭ [9] or ⏮ [6] to toggle to **Yes**. Press ⏯ (7) to confirm your selection. The title will be deleted.

To obtain a better folder structure overview, we recommend that you connect the device as a removable disk to your computer (see page 30).

Voice

This function lets you record and play voice via the built-in microphone [5].

You can control the recordings as follows:

Button	Function
R/V [3]	Press briefly: Volume adjustment Press and hold for 2 seconds: Start recording Press during recording: Stop recording
⏭ [9]	Next recording (if any)
⏮ [6]	Previous recording (if any)
⏯ [7]	Plays an existing recording
M [2]	Opens the Recording menu (see page 24).

Recording voice

In **Voice mode**, press and hold the **R/V** button [3] for approx. 2 seconds to start recording. The recording will be assigned a file name automatically with a sequential number.

The following information is displayed on the screen (example).

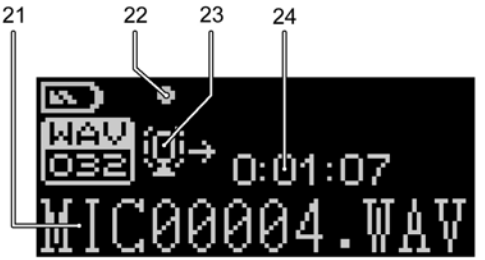

Number	Description
21	File name of current recording
22	Recording icon (blinking)
23	Microphone icon
24	Elapsed recording time

Playing Back a Recording

Press ⏭ [9] or ⏮ [6] to select the desired voice or radio recording and press ⏯ [7] to play it back.

Record Menu

Press the Mode button **M** [2] during recording to open the Record menu. For more information about the options **Repeat**, **Play Rate**, **Intro**, **Display**, **A-B** and **File Browse** contained in this menu, please read from page 17.

Setup

To open the Setup menu, please also read page 13 - Choosing the Operating Mode.

The settings menu lets you define basic parameters for customizing the device according to your needs. Press ⏭ [9] or ⏮ [6] to select the desired option and press ⏯ [7] to confirm.

For more information on the different menu items, see the following pages.

USB Mode

The USB mode contains the options **Pen Drive** and **DRM Download** (see also from page 30). Here you can decide how to use your device when connected to a computer. Even if the connection to the computer has been established already you can press the Mode button **M** [2] to toggle between the modes **Pen Drive** and **DRM Download**.

Connection type	Description
Pen Drive	Transfer, delete, rename or move data
DRM Download	Transfer files protected with DRM (Digital Rights Management) to the MP3 player

Depending on the connection type one of the following will be displayed once a connection has been established to the computer:

Pen Drive

DRM Download

Power

Press ⏭ [9] or ⏮ [6] to select whether you want the device to automatically power off after the set time when not being used(left figure).

Press the Mode button M [2] multiple times to move the marker to the right to highlight the digits. Then press ⏭ [9] or ⏮ [6] to change the preset time (right figure).

When using the Mode button to toggle behind the minutes display you can also enable the option "Always on in playback". In this case the device will never power off automatically.

Press ⏯ [7] to save the changes and exit the menu.

Language

This function has already been described under Getting Started. Please see page 14 for how to set the language.

Display

This function offers options for adjusting the display contrast and backlight.

Contrast

Press ⏭ [9] or ⏮ [6] to select a contrast value between 0 (low contrast) and 63 (high contrast).

Backlight

Press ⏭ [9] or ⏮ [6] to enable or disable the backlight or set a value between 1 second and 9 seconds. After the set time has elapsed without pressing any button, the display will turn off to save power.

Sys tools

This submenu gives you access to the flash memory folder structure.

Delete file

Opens the root folder of the device. You can access the folders **MICIN** (voice recordings) and **MTPMEDIA** (music).

To navigate, proceed as follows:

Button/Icon	Function
⏩ [9]	Forward browsing through folders and files
⏪ [6]	Backward browsing through folders and files
⏯ [7]	Opens a highlighted folder / Deletes a highlighted file (see below)
	One folder level up

You can delete the currently highlighted title by pressing the ⏯ [7] button. The message **No** will appear: Press ⏩ [9] or ⏪ [6] to toggle to **Yes**. Press ⏯ (7) to confirm your selection. The file will be deleted.

Format

Formatting will erase all data that has been stored in the flash memory. You can use two options: **Quick** and **Complete**.

Select **Quick** if you want to erase all files.

Select **Complete** to delete all files and to format the disk by using the FAT32 file system.

Both options will erase all data stored on the built-in memory.

Reset

Select **Reset** to restore the factory-default configuration. All menu settings (including the display language) will be reset.

After choosing **Reset**, the message **No** will appear. Press ⏭ [9] or ⏮ [6] to toggle to **Yes**. Press ⏯ (7) to confirm your selection.

You can also reset the device by briefly pressing the hidden **Reset** *button* [4]*. To do so, use a thin object (e.g. a paperclip).*

System Info

Here you can view the firmware version number and the chipset type of the device together with the available (FREE) and total (TOTAL) flash memory capacity.

Transferring Music

Connecting to a Computer

You can transfer MP3 and WMA files to the device. When connecting to a computer, please also read the section about the USB mode (page 25).

- Insert the round-shaped jack connector of the USB adapter cable [F] into the headphones connector of your MP3 player.
- Next, plug the flat USB connector of the USB cable into a free USB port on your computer.
- The computer will detect the connected MP3 player either as a removable disk or as a DRM player (depending on the USB mode setting, page 25).

As Pen Drive

The computer will detect the device as a removable disk and will display it under My Computer (see figure):

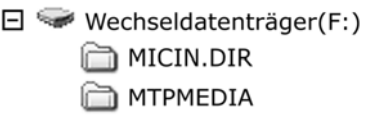

Use the common functions offered by your computer to copy, move, rename or delete data.

The folder "MICIN.DIR" contains all voice recordings (page 23), the folder "MTPMEDIA" is reserved for files that have been saved using the DRM Download (page 31).

Before disconnecting the device from your computer you must safely stop it to avoid data getting lost. To do this, click with the left mouse button on the "Safely Remove Hardware" icon in the task bar beside the system clock (see figure below).

Safely remove hardware example from Windows® XP

Safely remove hardware example from Windows Vista™

In the window that follows it is possible that more than one external device is displayed. Select the removable disk by left-licking on it. A message will soon appear, indicating that you can now safely remove the device.

As DRM Player

DRM means Digital Rights Management and uses a licensing process that only allows the copying of DRM-protected files under certain restrictions.

To copy DRM files you need the latest version of Windows Media Player®. This requires your computer to run on Windows® 2000/XP or Windows Vista™.

Launch Windows Media Player® and select the **Sync.** tab (see figure):

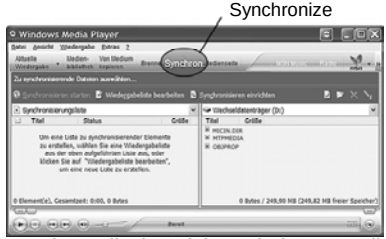

Follow the instructions displayed by Windows Media Player® and create a playlist.

Appendix

Technical Specifications

MP3 player	
Model	**Sport-Clip 1000**
Memory	2GB Flash memory
USB port	USB 2.0 (High Speed)
Rechargeable Battery	Lithium-Polymer
Signal-to-Noise ratio	> 85 dB
Operating temperature	5° C -35° C
Operating humidity	max. 75% rel. humidity
Max. output voltage for headphones	125 mV
Battery voltage	3.7 V ⎓
Battery capacity	240 mAh

Power adapter	
Model	Targa KSUFB0500100W1UK
Input	AC 100-240V, 50/60Hz, 0.15A
Output	5V ⎓ 1.0A max.

Earphones	
Model	**SPHS 1000**
Nominal voltage	530 mV
Impedance	32 Ohms
Model	**IEHS 1000**
Nominal voltage	51 mV
Impedance	32 Ohms

Details of Guarantee

36 month warranty from date of purchase

United Kingdom

Important warranty information

Dear Customer,

Thank you for purchasing a SILVERCREST product.

Please carefully read through the enclosed documentation or online help before putting your SILVERCREST product into service. If you have a problem, which can't be solved in this way, please contact our hotline.

If the problem cannot be solved over the phone, you will be given a reference number (RMA), which you should enclose together with a copy of the proof of purchase. After you have packaged the unit safe for transport and in plain packaging, please send it for warranty processing, with the RMA noted on the outside of the package, to the address given to you by our hotline employee. After receiving the unit we will correct the manufacturing and material defect free of charge.

Up-to-date information and answers to the most frequently asked questions are available on the internet from:

www.silvercrest.cc

This guarantee is valid in the UK.

Your statutory guarantees from the seller are in addition to this warranty and are not limited by it.

Hotline number:
0207-3650744
(Please have your serial number to hand!)

Manufacturer: TARGA GmbH, Postfach 2244, D-59482 Soest

www.silvercrest.cc

36 month warranty from date of purchase

Important warranty information

Dear Customer,

Thank you for purchasing a SILVERCREST product.

Please carefully read through the enclosed documentation or online help before putting your SILVERCREST product into service. If you have a problem, which can't be solved in this way, please contact our hotline.

If the problem cannot be solved over the phone, you will be given a reference number (RMA), which you should enclose together with a copy of the proof of purchase. After you have packaged the unit safe for transport and in plain packaging, please send it for warranty processing, with the RMA noted on the outside of the package, to the address given to you by our hotline employee. After receiving the unit we will correct the manufacturing and material defect free of charge.

Up-to-date information and answers to the most frequently asked questions are available on the internet from:

www.silvercrest.cc

This guarantee is valid in the Ireland.

Your statutory guarantees from the seller are in addition to this warranty and are not limited by it.

36
MONTH WARRANTY

Hotline number:
01-2421583
(Please have your serial number to hand!)

Manufacturer: TARGA GmbH, Postfach 2244, D-59482 Soest

www.silvercrest.cc

TARGA GmbH
Lange Wende 41
D-59494 Soest
www.silvercrest.cc

Mat-No.: 13822244